

Quick Installation Guide

Printer Overview

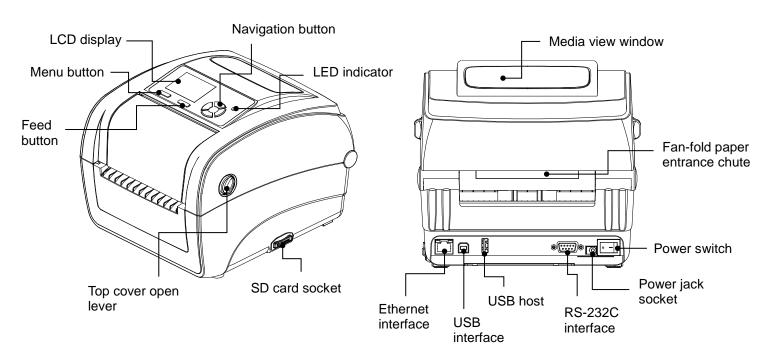



Note:


The interface picture here is for reference only. Please refer to the product specification for the interfaces availability.

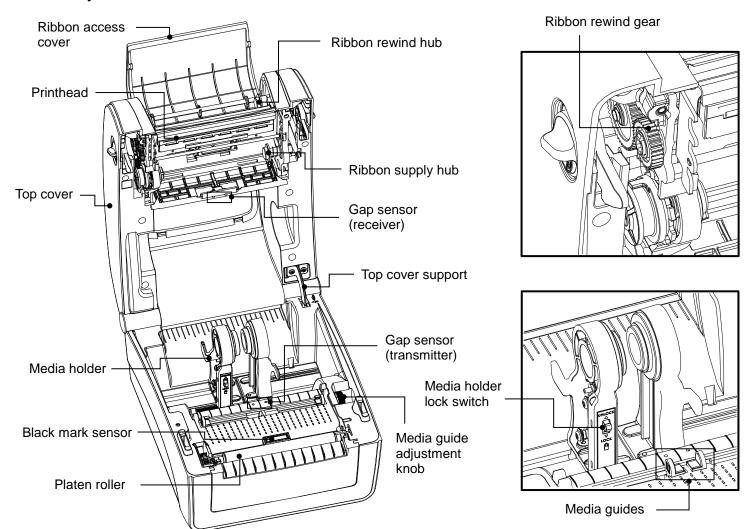


Open / Close the Top Cover

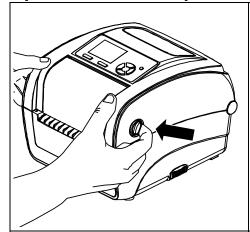

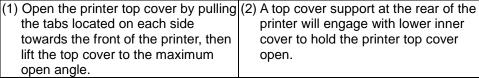

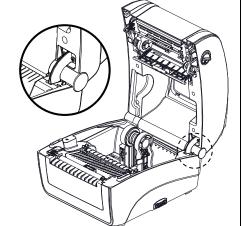


printer will engage with lower inner cover to hold the printer top cover open.

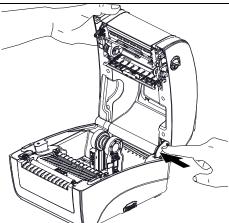


(3) Hold the top cover and press the top cover support to disengage the top cover support with lower inner cover. Gently close the top cover.


Loading the Ribbon

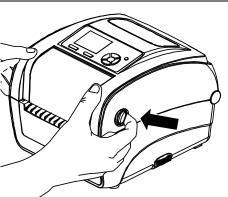


(1) Open the printer's top cover by pulling the top cover open levers located on each side of the printer and lifting the top cover to the maximum open angle.

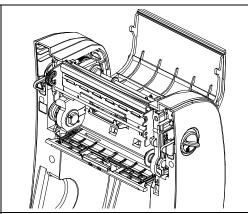


(2) Open the ribbon access cover.

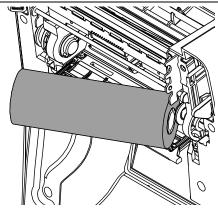


(3) Insert the ribbon right side onto the supply hub. Align the notches on the left side and mount onto the spokes.

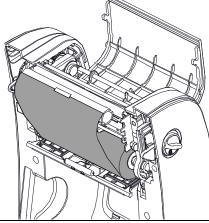


(4) Stick the ribbon onto the ribbon rewind paper core and insert the paper core onto the rewind hub.

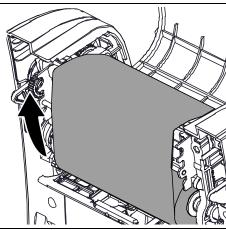



(5) Turn the ribbon rewind gear until the ribbon plastic leader is thoroughly wound and the black section of the ribbon covers the print head. Close the ribbon access cover and the top cover.

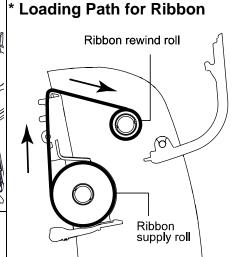


Loading the Media

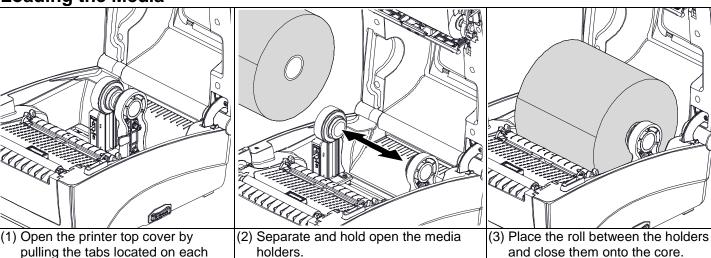

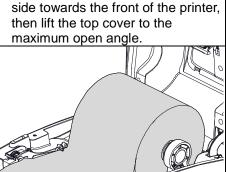

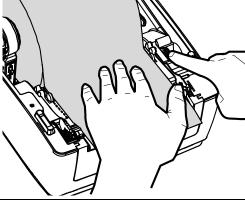

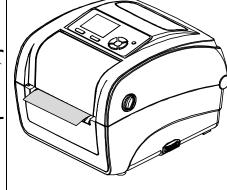

Press down the media holder lock


switch to hold the label roll firmly.

(4) Place the paper, printing side face up, through the media sensor and place the label leading edge onto the platen roller.

Move the media guides to fit the label width by turning the guide adjuster knob.

(6) Disengage the top cover support and close the top cover gently.

* Loading Path for Media

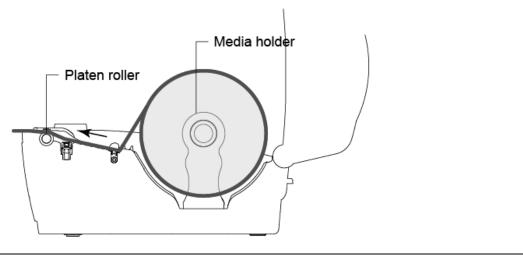

(7) Use "Menu" button or "Configuration Utility" to set the media sensor type and calibrate the selected sensor. (Start the "Configuration Utility" → Select the "T600" in the list → Click the "Printer Function" button → Click the "Calibrate" button)

Note:

Please calibrate the gap/black mark sensor when changing the media.

Button Functions

Feed button

- · Feed one label when the printer on ready mode
- Pause/Resume the printing process
- · Press the button to enter/select cursor located item from a menu

Menu button

- Enter the menu
- Exit from a menu or cancel a setting and return to the previous menu

Navigation button


· Scroll the menu list

Configuration Utility


The PTX Configuration Utility is an integrated tool incorporating features that enable you to explore a printer's settings/status; change a printer's settings; download graphics, fonts and firmware; create a printer bitmap font; and send additional commands to a printer. With the aid of this powerful tool, you can review printer status and settings in an instant, which makes it much easier to troubleshoot problems and other issues.

Start the Configuration Utility:

- (1) Connect the printer and computer with a USB cable.
- (2) Double click on the Configuration Utility icon 😉 to start the software.
- (3) The main interface will list all of the printer, including all printer that through USB interface connected to the computer, and all the printer that exist the same subnet with computer.
- (4) Select the printer in the list then click the button to enter the setting page.

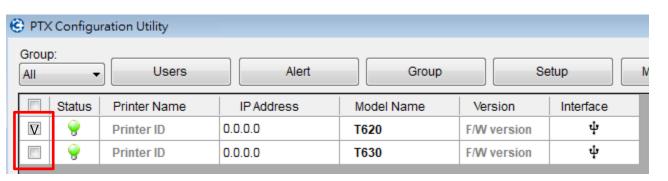

(5) The detail functions in the bottom of the main interface are listed as below.

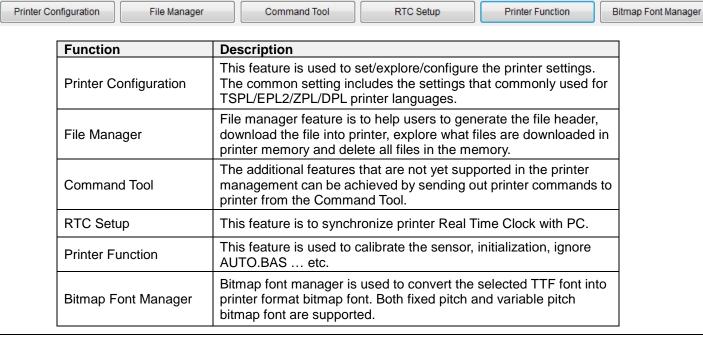

- * For more information and features about this printer, please refer to the Admin Manual inside the CD disk.
- * Specifications, accessories, parts and programs are subject to change without notice.

Page 2 of 2 P/N: P180044-001_Rev_A