

Tallygenicom Serial Number Locations All Models	
Model	Serial Number Location
2030	top access inside left
2120	top access inside left
3040	CPG International
3460	back of printer, underneath ribbed cover
3560	
3564	
3810	open front tractor door- right front frame
3811	back of printer, right side
3840	
3850	left side
3910	
3940	
4285	
4590	open front door- inside right side
5010	rear flip door inside
7025	bottom
7150	on rear top or on left side
7170	on rear by power cable
7610	on rear by power cable
7617	on rear cover
9080	
9160	
2430, 2431	
3014, 3024, 3210	under ribbon cartridge
3164, 3180, 3184	under ribbon cartridge
3204, 3240, 3244	under ribbon cartridge
3300, 3304, 3309, 3310, 3318, 3320, 3320Q	under ribbon cartridge
3400, 3404, 3405, 3418, 3410	under ribbon cartridge

3410XCQ, 3410XDQ	under ribbon cartridge
3410XLS, 3410XLQ	under ribbon cartridge
3470, 3470-24	back of printer, underneath ribbed cover
3480, 3580, 3480+	back of printer, underneath ribbed cover
3510, 3520, 3530, 3540	under ribbon cartridge
3570, 3574, 3580+	back of printer, underneath ribbed cover
3610, 3620, 3630, 3640	under bottom base casting
3810S	open front tractor door- right front frame
3812, 3842	open front tractor door- right front frame
3820, 3830	open front tractor door- right front frame
3840E	
3840EM	
3840EP	
3860, 3880	open front tractor door- right front frame
3870, 3972, 3974	open front tractor door- right front frame
3870plus	·CPG International·
3910IS	
3914, 3944	open front tractor door- right front frame
3940IP	open front tractor door- right front frame
4410, 4410XT, 4410XT+,	open front door- inside right side
4440, 4440XT, 4440XT+	open front door- inside right side
4470, 4470XT, 4471	open front door- inside right side
4490, 4490XT, 4492XT	open front door- inside right side
4510, 4520, 4530, 4540	
4590XT, 4592, 4594	open front door- inside right side (including standard and i cabinets)
4810, 4812	inside top cover
4840, 4840FS, 4842	inside top cover
4910, 4912, 4914, 4940, 4942, 4944	inside top cover
5050 i series with quietized cabinet	open front door- inside right side
5050 standard cabinet	inside top cover

5100 i series with quietized cabinet	open front door- inside right side
5100 standard cabinet	inside top cover
5100FS i series with quietized cabinet	open front door- inside right side
5100FS standard cabinet	inside top cover
5180 i series with quietized cabinet	open front door- inside right side
5180 standard cabinet	open front door- inside right side
6140, 6142, 6145	on rear cover
6241, 6241-LL	
6321, 6322, 6341, 6342, 6342-H	
6441, 6442, 6451, 6451V, 6481	
7040EC, 7080EC, 7080RP	on rear over parallel port
7612, 7612i, 7612+	on rear cover
7617, microLaser 17, microLaser 17e	on rear cover
7910, 7910+	open top cover, on top edge of frame
7912R, 7912L	open top cover, on top edge of frame
7916R, 7916L, 7916R+, 7916L+, 7916Lx	open top cover, on top edge of frame
7930S, 7930D	open front cover, on label at bottom left
7940D	open front cover, on label at bottom left
8920, 8930	looking at the printer from the rear - on the left side
9170, 9170A	
cL160	open door A, open top cover, on the right side is a barcoded serial number label also printed on summary page
EasyCom Xpress PSIO 10/100	no serial number
GeniLink 840	no serial number
GL 510, 511, 512	no serial number
GL 520, 521, 522	no serial number
GL 530, 531	no serial number
GL 710, 711, 712, 720,	no serial number

721, 722	
GL 730, 731, 732, 740, 741, 742	no serial number
GL 911, 912, 921, 922	back of box
GL 941, 942, 948, 951, 952	back of box
GL E501, E502	no serial number
GL I503, I504	no serial number
Intelliprint mL260	open the back cover- on bottom right also printed on summary page
Intelliprint mL280+	on the back near the power cord also printed on summary page
Intelliprint mL450	label inside the toner access door also printed on summary page
LA36N, LA36W	lower left side
LA450	back of printer, underneath ribbed cover
LA500, LA700plus	back of printer, underneath ribbed cover
LA700	back of printer, underneath ribbed cover
LG05plus, LG10plus, LG15plus	inside rear door, upper center
LGL5plus	rear panel
LN21	open the back cover- on bottom right also printed on summary page
LN28, LN28+	on the back near the power cord also printed on summary page
LN40	open the toner door cover- at the bottom also printed on summary page
LW 400, 800, 1200	rear inside pedestal
LW 455, 855, 1255	rear door bottom
M200, M201	bottom of box
M202, M202plus	back of box
M204, M205, M206, M305	back of box
microLaser 12	on rear cover
microLaser 14	·CPG International·
microLaser 14+	
microLaser 17	on rear cover
microLaser 170	back cover
microLaser 170N	back cover
microLaser 17e	on rear cover

microLaser 200	on back center
microLaser 210	open the back cover- on bottom right also printed on summary page
microLaser 280	on the back near the power cord also printed on summary page
microLaser 30D,microLaser 320	open the toner door cover- at the bottom also printed on summary page
microLaser 30S	open front cover, on label at bottom left
microLaser 40	open front cover, on label at bottom left
microLaser 400	on back center
microLaser 401	open the toner door cover- at the bottom also printed on summary page
microLaser 401	open the toner door cover- at the bottom also printed on summary page
microLaser 7912S	open front cover, use S/N on small white label
microLaser 7916S	open front cover, use S/N on small white label
microLaser 7918S	open front cover, use S/N on small white label
microLaser 7924S, microLaser 7924S plus	open front cover use S/N on small white label
microLaser C4	on back center
MobileJet	Back
MobileWriter	Back
MPS100, RapidPrint 1000	back of box
MT130/24	Back
MT130/9	Back
MT131/24	Back
MT131/9	Back
MT150/24	Back
MT150/9	Back
MT151/24	Back
MT151/9	Back
MT160	Back
MT180	Back
MT222	Back
MT230/24	Back
MT230/9	Back

MT290	Back
MT330	Back
MT340	Back
MT350	Back
MT360	Back
MT380	Back
MT460D	Back
MT490	Back
MT5200	Back
MT645	Back
MT660	Back
MT661	Back
MT690	Back
MT691	Back
MT735	Back
MT80	Back
MT81	Back
MT82	Back
MT85	Back
MT86	Back
MT87	Back
MT88	Back
MT904	Back
MT905	Back
MT906	Back
MT908	Back
MT910	Back
MT911	Back
PS1300ETX, PS1100E, PS1000ETX	no serial number
S*S 280	Back
S*S DSx	Back

System Adapter	no serial number
T1000	Back
T2030/24	Back
T2030/9	Back
T2040	Back
T2045	Back
T2060	Back
T2130/24	Back
T2130/9	Back
T2140	Back
T2145	Back
T2150	Back
T2155	Back
T2170	Back
T2240/24	Back
T2240/9	Back
T2245	Back
T2250	Back
T2265	Back
T2280	Back
T2340/24	Back
T3010	Back
T3016	Back
T3016C	Back
T3016IGF	Back
T3110	Back
T3116	Back
T3116IGF	Back
T5023+	Europe
T6045	Back
T6050	Back

T6050LJ	Back
T6065	Back
T6082	Back
T6090	Back
T6092	Back
T6100	Back
T6100LJ	Back
T6101	Back
T6140	Back
T6141	Back
T6180	Back
T6212	Back
T6212LJ	Back
T6215	Back
T6215LJ	Back
T6218	Back
T6218LJ	Back
T7070	Back
T8006	Right Side
T8006e	Right Side
T8016	Open door A, open top cover, label above imaging unit
T8024	Open door A, open top cover, label above drum unit
T8050	Back
T8104	Back
T8106	Right Side
T8204	Back
T8306	Right Side
T8406	Right Side
T9008	Back
T9012	Back
T9021i	Back

T9021n	Back
T9030	Back
T9031	Back
T9034T	Back
T9040	Back
T9112	Back
T9114i	Back
T9114n	Back
T9116	Back
T9130T	Back
T9132	Back
T9134T	Back
T9140	Back
T9220i	Back
T9220n	Back
T9230T	Back
T9412c	Inside on left, near print unit
T9412i	Inside on left, near print unit
T9412n	Inside on left, near print unit

theprinterplace.com 800-243-3338